

The uppermost float switch (overflow safety switch) should be pointing horizontally when at rest (no water in bucket).

