

SAFETY INSTRUCTIONS

⚠ WARNING

1. High voltage may cause serious injury from electric shock. Disconnect electrical power before starting installation or servicing. Leave power disconnected until installation/service is completed.
2. Sharp edges may cause serious injury from cuts. Use care when cutting plenum openings and handling duct work.
3. Dropping may cause personal injury or equipment damage. Handle with care and follow installation instructions.

⚠ CAUTION

1. Read all instructions before beginning installation.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
3. Do not use in pool applications. Pool chemicals can damage the dehumidifier.
4. Do not use solvents or cleaners on or near the circuit board. Chemicals can damage circuit board components.
5. Wait 24 hours before running the unit if it was not shipped or stored in the upright position
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
7. If hard wiring the appliance, install a disconnect within eyesight of the appliance which provides full disconnection under overvoltage category III conditions. Refer to local and national codes and full instructions on page 8.

READ AND SAVE THESE INSTRUCTIONS

TABLE OF CONTENTS

SAFETY INSTRUCTIONS	1
SPECIFICATIONS	3
UNPACKING THE DEHUMIDIFIER	4
LOCATION CONSIDERATIONS	4
FLOOR MOUNTING	5
SUSPENDING THE DEHUMIDIFIER	6
Install Brackets for Suspending Unit	6
Hanging the Dehumidifier	6
Ducting	6
DRAIN INSTALLATION	7
Condensate Pan, Condensate Pump and Float Switch	7
HARD WIRING – LINE VOLTAGE	8
MODEL A77 – REMOTE CONTROL AND WIRING	9
Alternate External Controls	9
DAISY CHAIN WIRING	10
Model A77 as Driving Control	10
Alternate External Dry Contact Control as Driving Control	11
SYSTEM SET UP & CHECKOUT	12
Installer Test Mode	13
START UP AND SEQUENCE OF OPERATION	13
Using the Dehumidifier Control	13
Using Model A77 or External Control	13
TROUBLESHOOTING	14
Table 1 – Diagnostic Codes	14
Table 2 – Troubleshooting Guide	15
LIMITED WARRANTY	15
SERVICE PARTS	16

SPECIFICATIONS


ENVIRONMENTAL	
Operating Temperature Range	50°F to 104°F
Operating Dew Point Lower Limit	36°F

MECHANICAL	
Weight	360 lbs (without packaging)
Drain Size	3/4" FNPT
Capacity	710 PPD @ 80°F, 60% RH
Filter	MERV 11 (29.5" x 31.5" x 1.75")
Airflow	1760 CFM (free flow)

ELECTRICAL	A710V1	A710V3
Voltage	208-240 VAC (-), 1 ϕ , 60 HZ	277 VAC, 1 ϕ , 60 HZ
Operating Current	19.6A @ 80°F, 60% RH, 240 VAC	17.4A @ 80°F, 60% RH, 277 VAC
Rated Current	24A (install on dedicated 30A circuit)	24A (install on dedicated 30A circuit)
Efficiency	3.0 L/kWh (6.35 pints/kWh) @ 80°F, 60% RH, 240 VAC	3.0 L/kWh (6.35 pints/kWh) @ 80°F, 60% RH, 240 VAC

DIMENSIONS

FIGURE 1 – DIMENSIONS (INCHES)

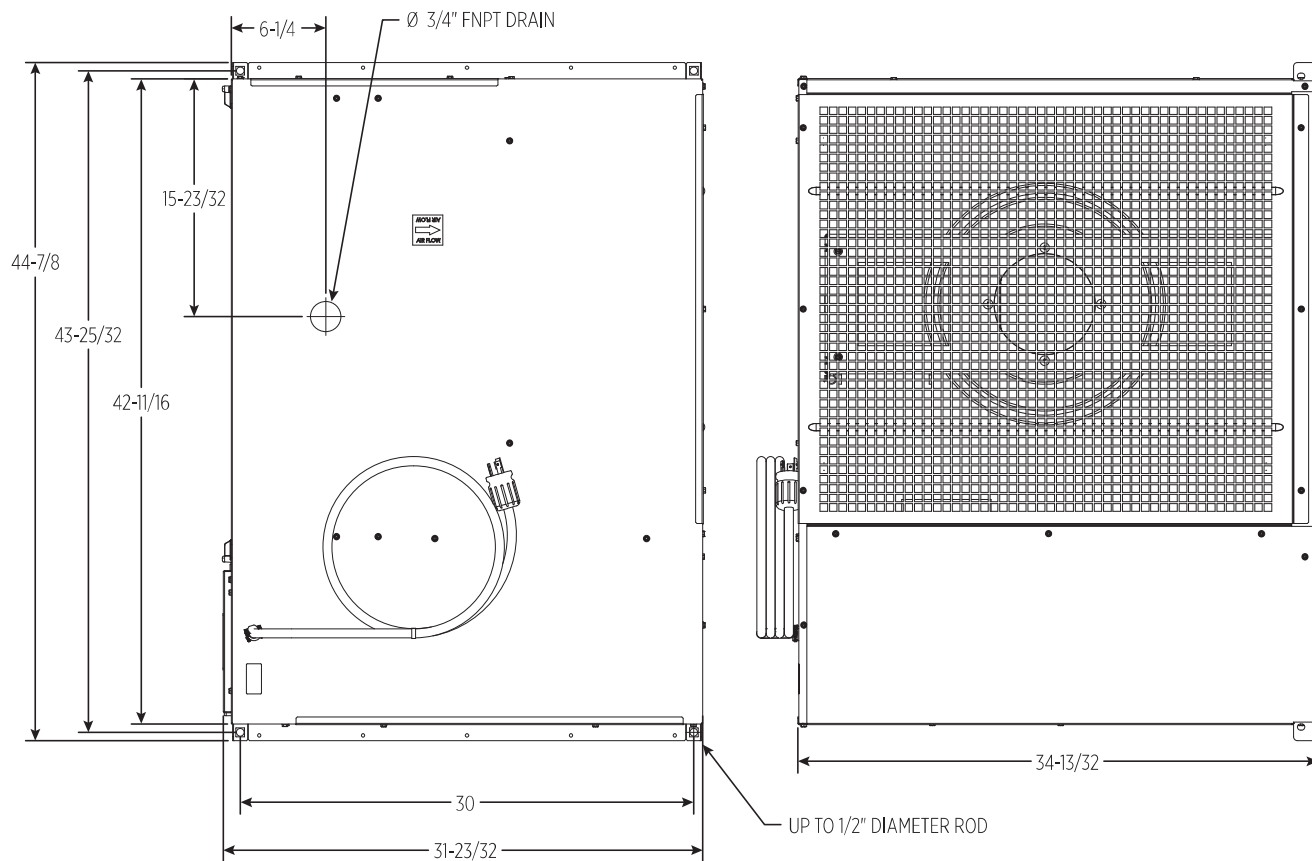

90-2529

UNPACKING THE DEHUMIDIFIER

Disassemble the carton, but leave the unit attached to the pallet for installing the unit with a forklift or scissors lift.


INCLUDED IN THE CARTON

- Dehumidifier
- Installation manual
- Model A77 control
- 3/4" P-Trap
- 3/4" MNPT x 3/4" female pipe
- 3/4" x 3/4" x 3/4" T-fitting
- Terminal screwdriver
- 30 feet of thermostat cable
- MERV 11 filter

LOCATION CONSIDERATIONS

This appliance is not to be accessible to the general public. The dehumidifiers should be spaced evenly throughout the area to be dehumidified with the following recommendations:


1. Avoid placement where the discharge of one dehumidifier is pointing toward the inlet of another.
2. Avoid locating the dehumidifier inlet too near a supply register. Space is not usually available to totally avoid this, but minimizing the amount of cold air that is discharged to the dehumidifier inlet will improve moisture removal performance of the dehumidifier.
3. Account for handling dehumidifier condensate by considering drain or sump pump locations.
4. Leave 18" minimum clearance for access to the user interface, electrical panel for service and filter for maintenance.

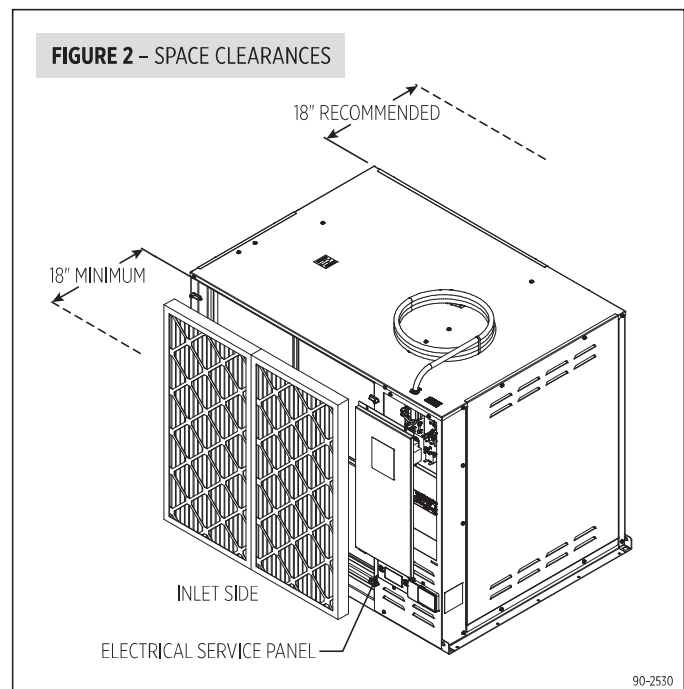

FLOOR MOUNTING

The 5789 leveling feet kit (not included) is required for floor mounting. The drain hose/pipe must continuously slope downward toward the drain. Use solid supports as needed to elevate the unit enough to allow for continuous drain slope. Use the adjustable feet to level the unit right to left and front to back so that unit drains properly.

FIGURE 3 – FLOOR MOUNTING USING LEVELING FEET KIT 5789

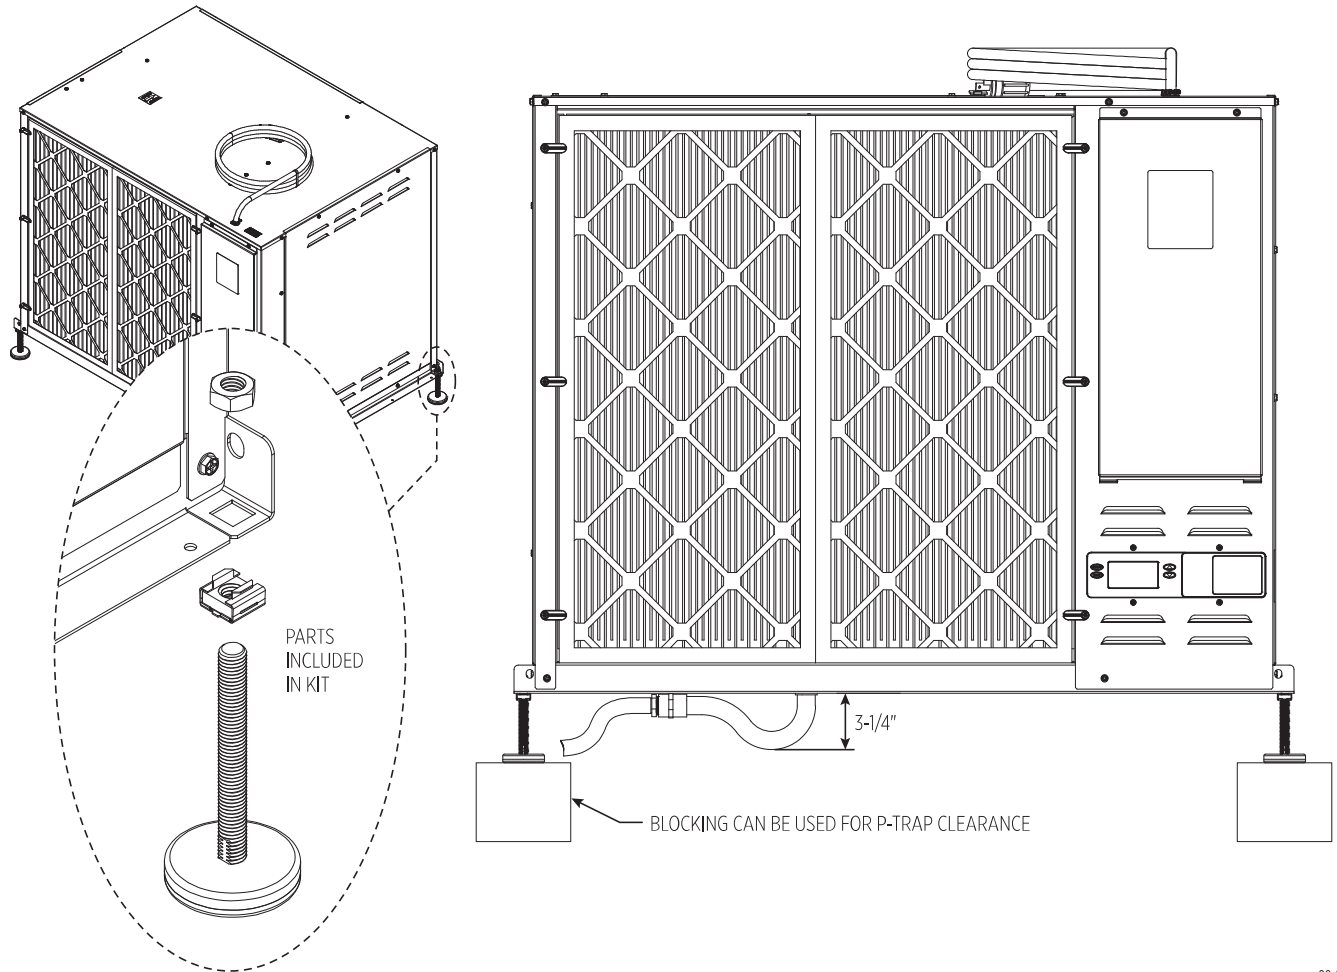



SUSPENDING THE DEHUMIDIFIER

HANGING THE DEHUMIDIFIER

Use 3/8" or 1/2" threaded rod to suspend the unit from appropriate ceiling structure (see **FIGURE 4**). The unit weight is 360 lbs. Install vibration isolators if located in an area where noise could be a concern. Level unit right to left and front to back so that unit drains properly. **IMPORTANT: Install lock nuts to secure the dehumidifier to the threaded rod as shown in FIGURE 5.**

DUCTING


Use duct kit part number 5859 for installing ductwork to the dehumidifier. Reference the instructions provided with duct kit 5859 for installation details.

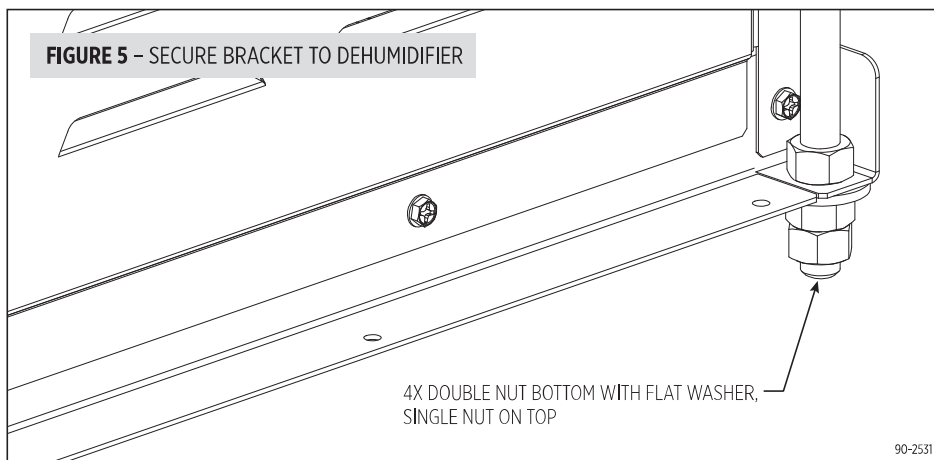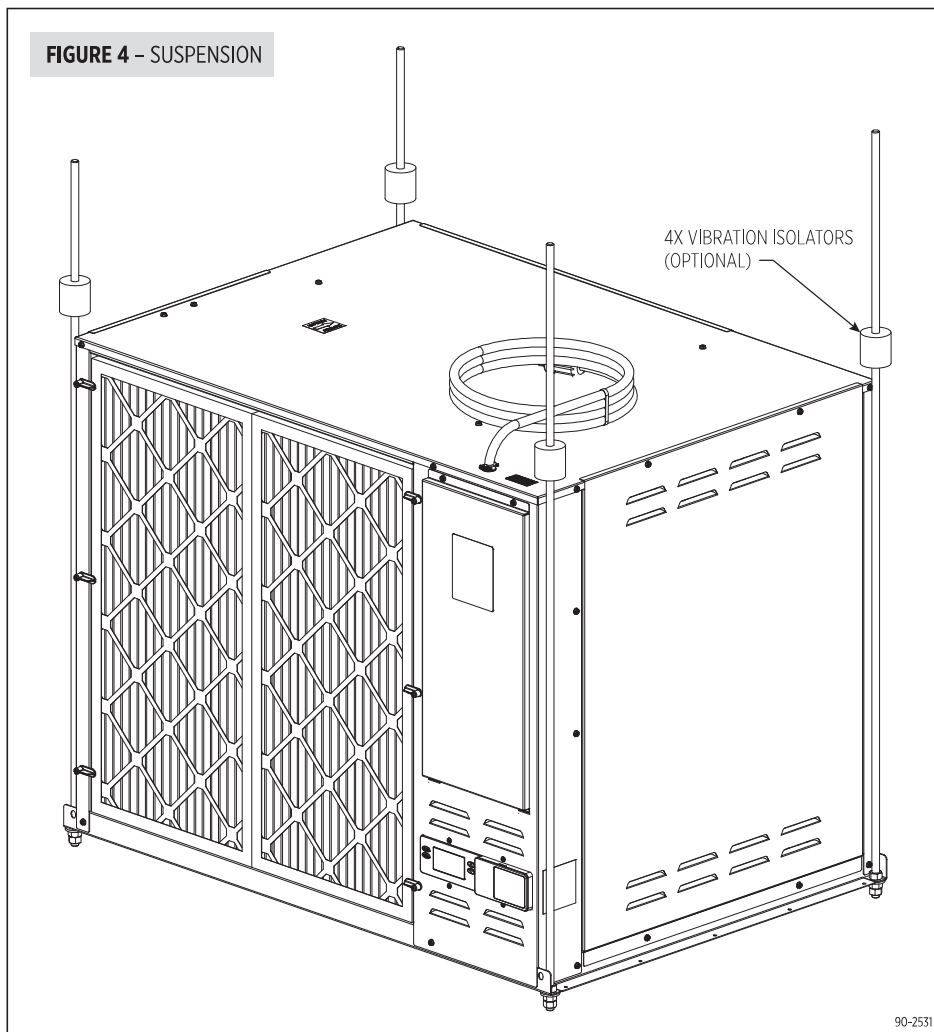

DRAIN INSTALLATION

The blower draws air through the dehumidifier, putting the cabinet under negative pressure. As a result, the included P-trap is required for proper draining. The installed drain fitting on the dehumidifier is 3/4" FNPT. Use the included fittings to trap and install the drain. See **FIGURE 6**. The drain tubing can be hard pipe or flexible tubing. **NOTE:** PTFE thread seal tape is recommended for the threaded connections and **hand tighten only**. Use PVC primer and cement for all slip fit connections to prevent leaks. After installing the drain connections, trap, and tubing, pour enough water (about 2 pints) into the dehumidifier drain pan to prime the trap.


If the drain tubing will be installed to a condensate pump, or if a common drain tube will serve multiple dehumidifiers or air conditioners, a vacuum break is recommended to prevent the p-trap from being unintentionally siphoned. Install a T-fitting with a short section of drain tubing pointed vertically and extending above the start of the filter (see **FIGURE 6**). Install the vacuum break after the P-trap.

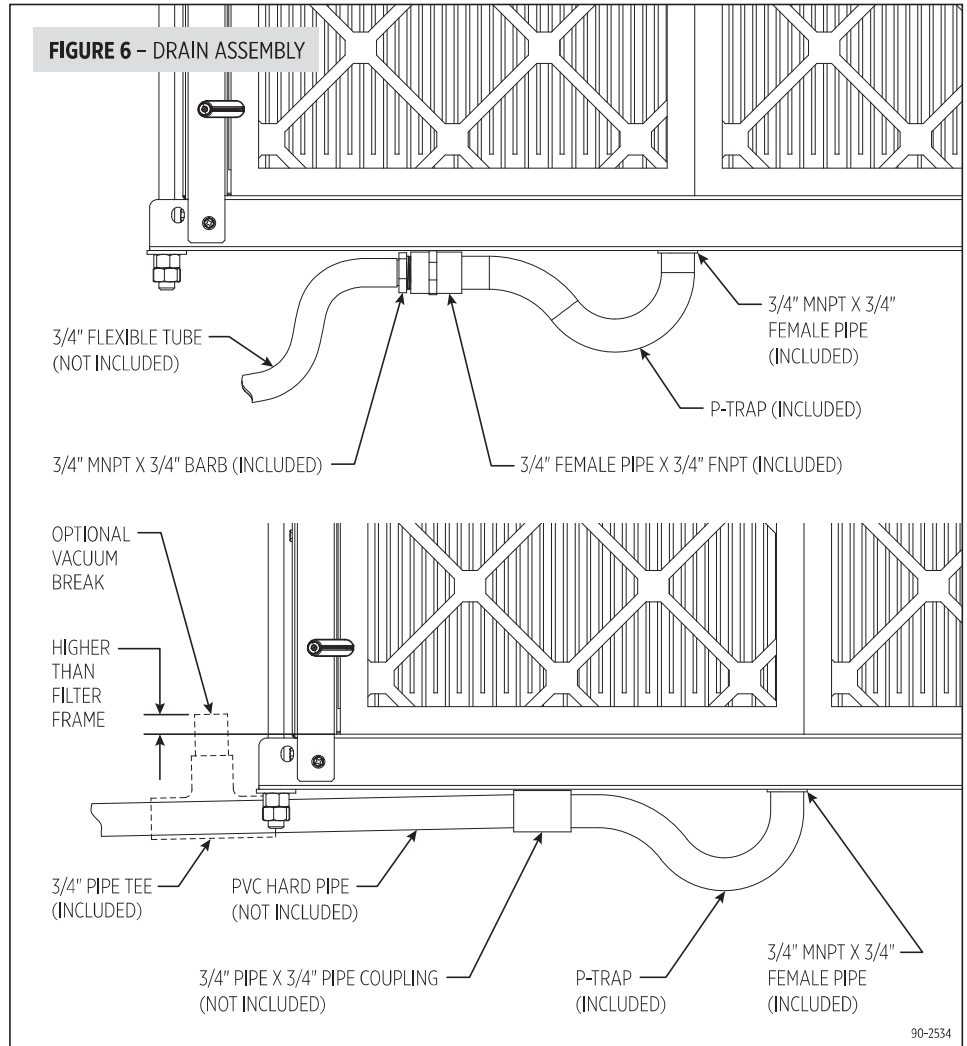

CONDENSATE PAN, CONDENSATE PUMP AND FLOAT SWITCH

A condensate pan is recommended when suspending the dehumidifier over finished areas or product. Adhere to local codes regarding draining of the condensate pan. If a condensate pump is needed, install it in the condensate pan as well.

Install a condensate overflow safety switch (i.e. float switch) in the condensate pan, remove the factory installed jumper wire between the Float Switch terminals on the control and wire the float switch to the dehumidifier as shown in **FIGURE 7**. Overflow safety switches on condensate pumps can be wired to the Float Switch terminals in a similar fashion.

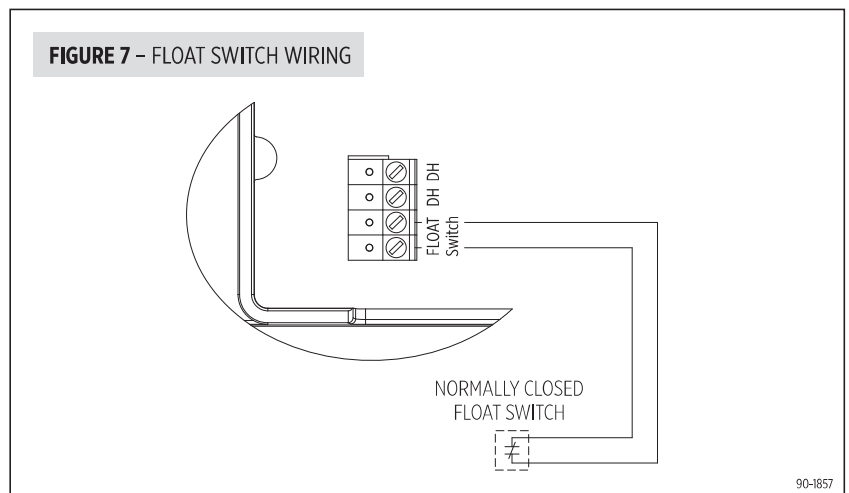

HARD WIRING – LINE VOLTAGE

⚠ CAUTION

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The A710V1 dehumidifier comes with a power cord that has a NEMA L6-30 plug that can simply be plugged into a corresponding NEMA L6-30 receptacle. The A710V3 dehumidifier comes with a power cord that has a NEMA L7-30 plug that can simply be plugged into a corresponding NEMA L7-30 receptacle. See **FIGURE 8** for power cord wiring connections. The plug can be removed and replaced by hard-wired electrical service if desired.


United States Installation: Make all electrical connections in accordance with the current edition of the NEC ANSI/NFPA 70 and any local codes or ordinances that may apply.

Canada Installation: Make all electrical connections in accordance with the current edition of the Canadian Electrical Code CSA C22.1 and any local codes or ordinances that may apply.

	Model A710V1	Model A710V3
Voltage	208-240 VAC, single phase, 60Hz	277 VAC, single phase, 60Hz
Recommended Breaker Size	30A	30A
Recommended Wire Gauge	10 Gauge, Copper	10 Gauge, Copper
Maximum Fuse or Breaker Size (MOC)	40A at 208V 35A at 240V	30A
Minimum Circuit Ampacity (MCA)	28A at 208V 25A at 240V	21A


1. Disconnect electrical service at the main fuse or circuit breaker.
2. Run electrical service to where the dehumidifier is to be installed following all required local and national codes and standards.
3. Remove the electrical service panel (see **FIGURE 9**).
4. Depress the levers of the terminal blocks mounted on the MOV board to disconnect the black and white power cord wires.
5. Remove the screw securing the power cord ground wire to the cabinet while holding the ferrite ring. Retain the ferrite ring for the electrical service wires.
6. Route the service wires through the opening in the dehumidifier, then through the ferrite ring, and secure the cable or conduit to the opening in the dehumidifier using fittings/clamps intended for the conduit/cable used.
7. Insert the black service wire into the L1 terminal and the white service wire into the L2 terminal. Release levers to lock into place.
8. Insert the ground wire (bare or green) of the electrical service into the ground lug and secure it in place by tightening the ground lug screw.
9. Reattach the electrical service panel to the dehumidifier.
10. Restore electrical service at the fuse or circuit breaker.

FIGURE 8 – POWER CORD WIRING

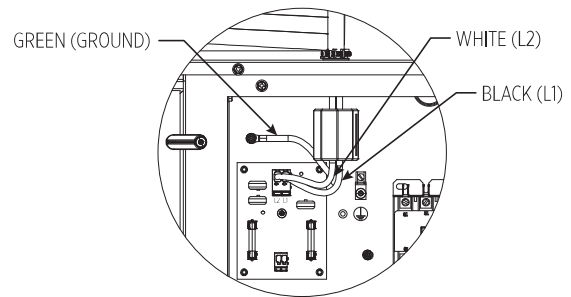

90-2543

FIGURE 9 – HARD WIRING TO REPLACE THE POWER CORD

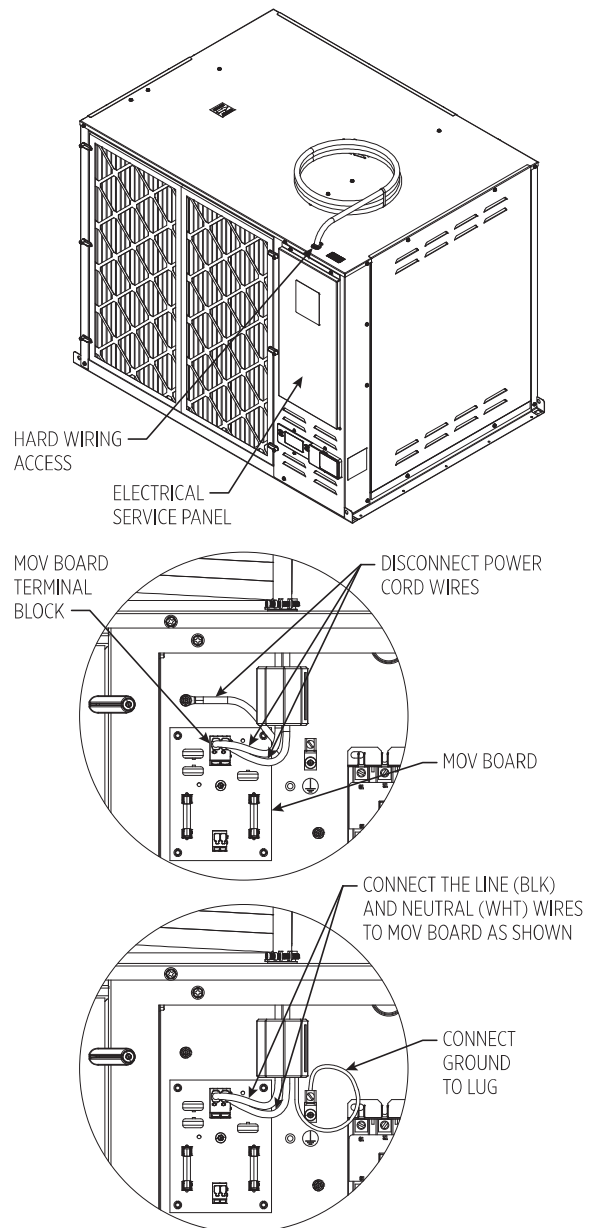

90-2535

MODEL A77 – REMOTE CONTROL AND WIRING

NOTE: Use 18-22 AWG wire for control wiring.

Humidity can be controlled using the internal dehumidifier control, a Model A77 control or a different external control like a thermostat.

Installing an external control eliminates the need to run the dehumidifier blower for sampling as the control is constantly measuring the humidity close to the canopy. When the humidity level rises above the setting, the dehumidifier is turned on.

To install and use the Model A77 control, complete ALL steps:

1. Unplug the dehumidifier or turn off power to the circuit at the breaker or fuse.
2. Run a 4-wire thermostat cable (use 18-22 AWG wire) from the Model A77 to the control of the dehumidifier.
3. Trim about 1/4" of insulation from the end of the wires on each end. Insert the wire into the terminals as shown in **FIGURE 10** and tighten to secure.
4. Restore dehumidifier power. There is a delay of three minutes after restoring power before the dehumidifier will respond to the control.
5. Set up the dehumidifier to **ENABLE REMOTE** control as shown on page 12.
6. See **USING THE MODEL A77 OR EXTERNAL CONTROL** on page 13 for start up instructions.



The Model A77 will measure the relative humidity and turn the dehumidifier on and off to control the humidity level to the desired setting. The humidity setting can be adjusted from the control while the display allows easy access and monitoring of the humidity level in the space. It is recommended that the Model A77 be mounted at/near canopy height. Shield the Model A77 from direct exposure to HPS or LPS lighting.

Press the ON button on the Model A77 to turn on the control. The UP/DOWN arrow buttons are used to set the desired humidity setting. At all other times, the Model A77 will display the measured humidity level. Reference the Model A77 Installation and Operating Instructions for set-up.

ALTERNATE EXTERNAL CONTROLS

Alternatively, use any other humidity control system as long as it has a dry contact, normally open output dedicated to controlling the dehumidifier.

When using an external control, set up the dehumidifier to **ENABLE EXTERNAL** control as shown on page 12. Reference the installation literature provided with the alternative control for wiring, set-up and operating details.

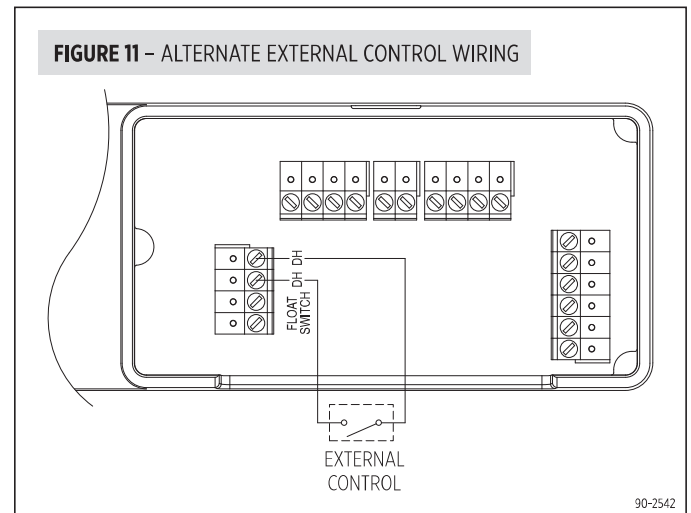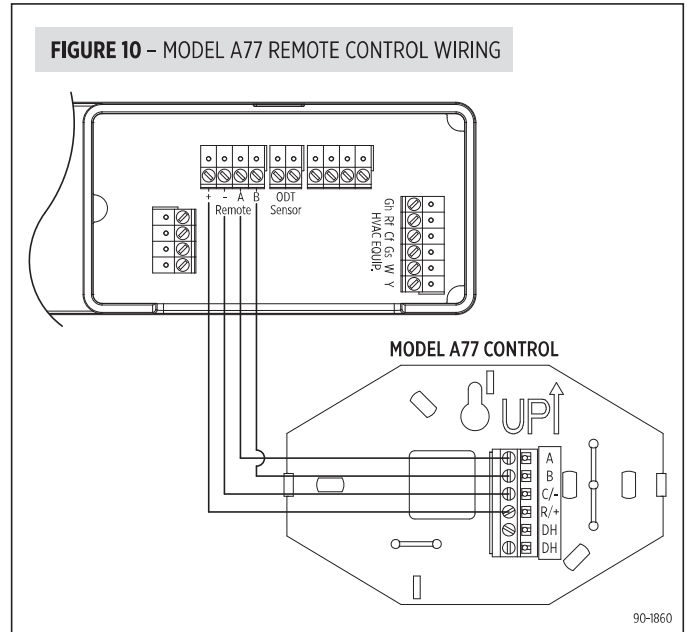

DAISY CHAIN WIRING

Anden dehumidifiers can be wired in a daisy chain application, allowing one Model A77 or alternate dry contact dehumidistat to control any number of dehumidifiers wired together. Reference the dehumidifier Installation and Operation Manual for detailed set-up and operation.


MODEL A77 AS DRIVING CONTROL

When a Model A77 is used to control the first dehumidifier, Unit #1 must be set to **ENABLE REMOTE** in the set-up menu. All downstream units must be set up to **ENABLE EXTERNAL** in each set-up menu. See page 12 for set up details, and wire as shown in **FIGURE 12**.

SEQUENCE OF OPERATION

Each unit in the daisy chain responds to the first unit being controlled by the A77. When the humidity level rises above the humidity setting, all units will dehumidify until the humidity measured by the A77 falls below the setting.

IMPORTANT: If the A77 or first dehumidifier experiences a fault or loses power, all downstream dehumidifiers will also stop function. If any dehumidifier in the daisy chain other than Unit #1 experiences a fault, that unit will stop operation as determined by the fault but all other units will continue operating. If any dehumidifier loses power, all downstream units will stop function.

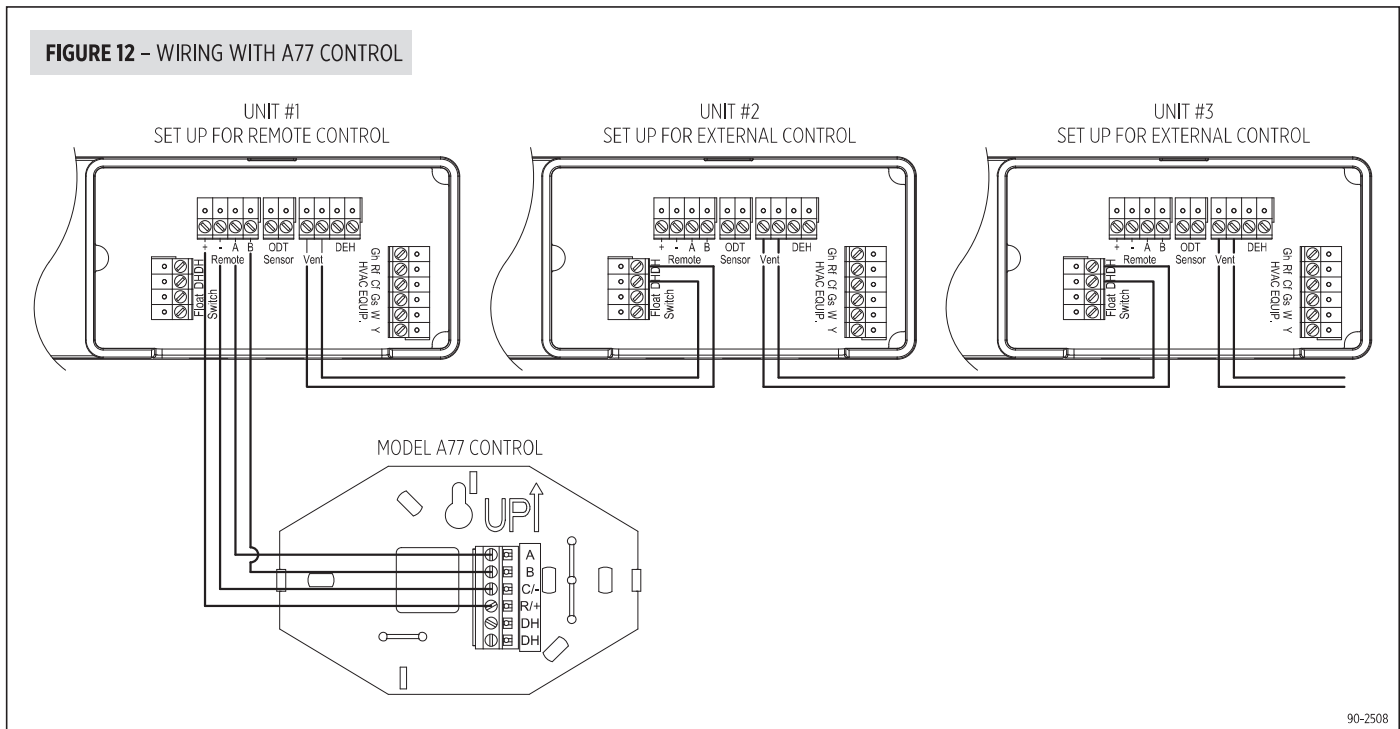

90-2508


ALTERNATE EXTERNAL DRY CONTACT CONTROL AS DRIVING CONTROL

When a dry contact control is used to control the first dehumidifier, Unit #1 must be set to **ENABLE EXTERNAL** in the set-up menu. All downstream units must be set up to **ENABLE EXTERNAL** in each set-up menu. See page 12 for set up details and wire as shown in **FIGURE 13**.

SEQUENCE OF OPERATION

Each unit in the daisy chain responds to the first unit being controlled by the external control. When the humidity level rises above the humidity setting, all units will dehumidify until the humidity measured by the external control falls below the setting.

IMPORTANT: If the external control experiences a fault, all downstream dehumidifiers will also stop function. If any dehumidifier experiences a fault, that unit will stop operation as determined by the fault but all other units will continue operating. If any unit loses power, all downstream units will stop function.

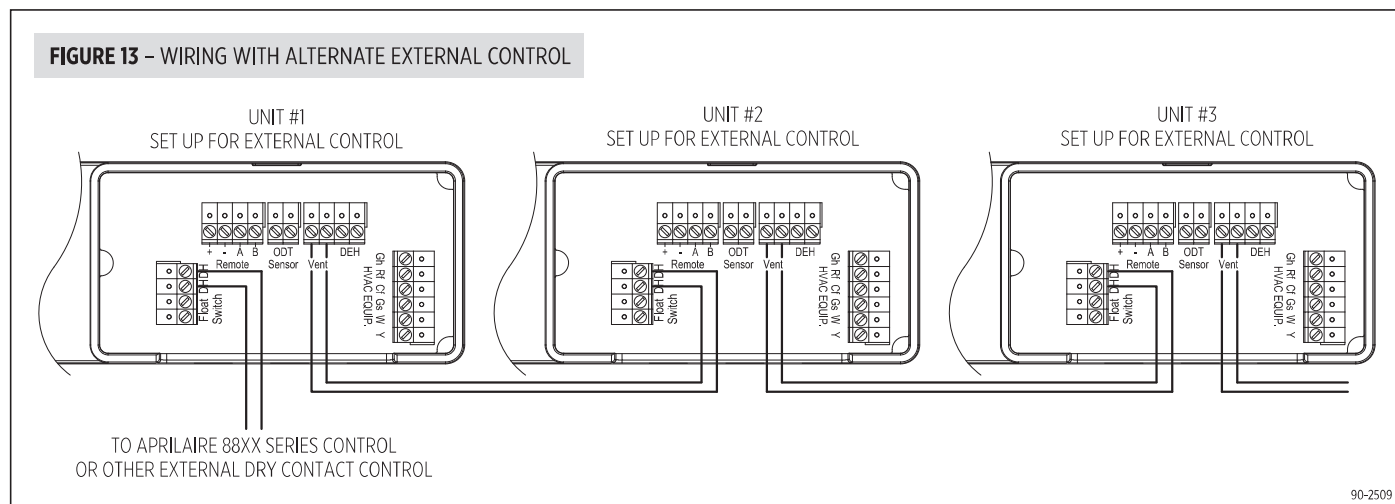


SYSTEM SET-UP & CHECKOUT

Skip set up and proceed to **INSTALLER TEST MODE** on page 13 **unless:**

- A Model A77 or other external control is to be installed
- changing the air sampling rate

1. Check all wiring.
2. Make sure the wire access cover has been snapped back onto the on-board control.
3. Plug unit in and turn power switch to ON.
4. The on-board control screen should display OFF.

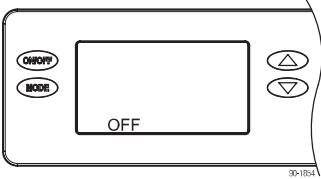


NOTE: If the display backlight is not on, the first button press (any button) will only turn on the backlight. Press the button a second time to achieve function.


5. Hold the MODE button on the on-board control for 3 seconds to enter the Installer Set-up Menu.
6. Navigate through the following screens to set up the dehumidifier for the installed application.

Use the UP or DOWN arrows to select items and use MODE to switch to the next set-up option. To exit installer set-up, all options must be scrolled through using the MODE button.


7. After the installer set up options have been completed, DONE will blink for 3 seconds and the control will return to the OFF screen.

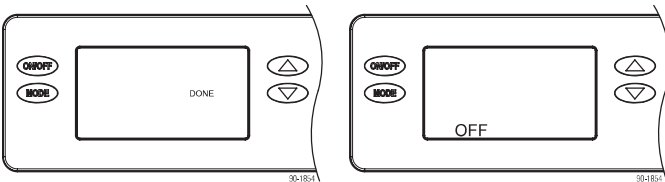

REMOTE CONTROL

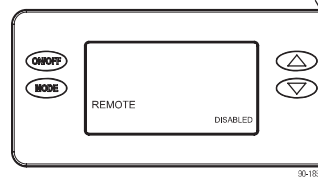


If not installing a Model A77, leave DISABLED and press MODE to go to the next screen.

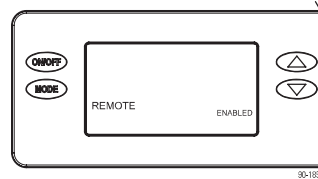


If installing a Model A77, press the UP or DOWN button to change to ENABLED and then press MODE to go to the next screen

EXTERNAL CONTROL

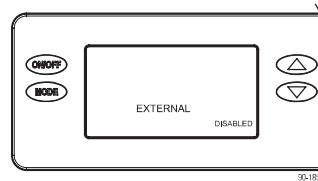


If using the dehumidifier on-board control, leave DISABLED and press MODE to go to the next screen.

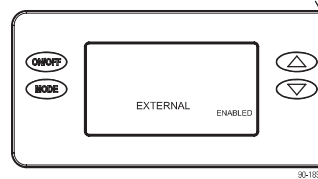


If using an 8800 Series thermostat as an external control, use the UP or DOWN button to select ENABLED, then press MODE to go to the next screen.

AIR SAMPLING

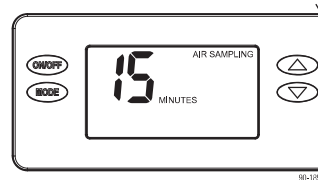

Use the UP or DOWN button to adjust how frequently the dehumidifier samples the air to determine whether or not to dehumidify. Fewer minutes means the dehumidifier will sample more frequently to minimize humidity swings, but increases cost to operate due to more frequent fan operation. Press MODE when done to move to the next screen.

RH OFFSET

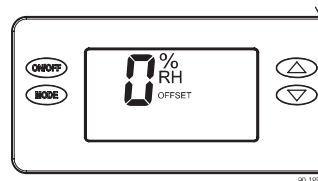


An offset can be applied to the on-board humidity reading to avoid discrepancies with other humidity measuring devices in the home. Use the UP/DOWN arrows to select an offset from -5% to 5%. Press MODE to exit the installer set-up screens.


INSTALLER TEST MODE

If everything is properly wired, the dehumidifier and all of the wired components will turn on and off during Installer Test Mode to demonstrate that all are properly operating. Installer Test Mode lasts for four (4) minutes. If the ON/OFF button is pressed during test mode, the dehumidifier will exit Installer Test Mode and return to the OFF screen.


DEHUMIDIFICATION ONLY

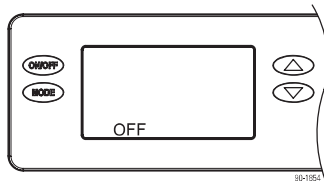


If the dehumidifier is not already OFF, press the ON/OFF button to turn it off.

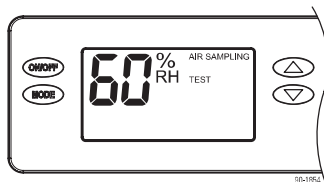


Press and hold the ON/OFF button and MODE buttons for 3 seconds. The measured humidity, AIR SAMPLING and TEST will show on the display.

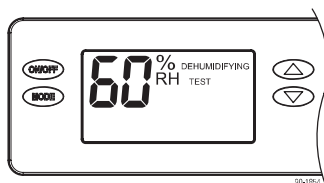

After three (3) minutes the dehumidifier compressor will turn on and DEHUMIDIFYING will replace AIR SAMPLING on the control screen.

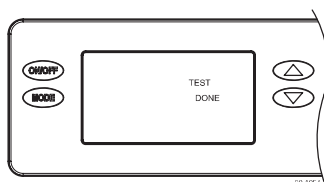

After one minute of compressor operation, all outputs will turn off and DONE will blink for 3 seconds and then return to the OFF screen.

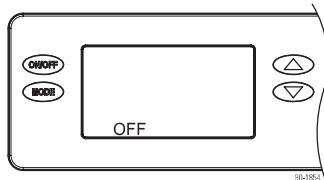

START UP AND SEQUENCE OF OPERATION

USING THE DEHUMIDIFIER CONTROL

1. Press the ON/OFF button to turn the dehumidifier control ON. The display will show the current setting, and the dehumidifier blower will turn on to start sampling the air.
The setting will be replaced by the measured humidity and **AIR SAMPLING** will show on the display.
2. Use the UP or DOWN button to adjust the humidity setting as desired.
3. After three (3) minutes of sampling, the measured humidity will be compared to the setting:
 - a. If the humidity is above the setting, the dehumidifier compressor turns on and **AIR SAMPLING** will be replaced by **DEHUMIDIFYING**. The compressor remains on until the measured humidity falls 3% RH below the setting.
 - b. If the measured humidity is below the setting, the blowers turn off and the display returns to showing the RH setting.
4. The dehumidifier will sample again after the number of minutes selected during the Air Sampling portion of the System Set Up (see page 12), or any time the humidity setting is lowered.

USING THE MODEL A77 OR EXTERNAL CONTROL

1. Press the ON/OFF button to turn the dehumidifier control ON. **REMOTE** or **EXTERNAL** will show on the display to indicate that the onboard controls are not being used.
2. At the Model A77, press the ON button; the Model A77 will display the measured RH.
3. Use the UP or DOWN button on the Model A77 to adjust the humidity setting as desired.
4. If the RH measured by the Model A77 rises above the setting, the dehumidifier will turn on. **DEHUMIDIFYING** will appear on the dehumidifier control display and **ON** will flash on the display of the Model A77 to show a call for dehumidification is being made. The dehumidifier will turn off when the RH measured by the Model A77 drops 3% RH below the setting.

TROUBLESHOOTING

Technical Support is available Monday through Friday, 7:00 a.m. to 5:00 p.m. CST, at (800) 972-3710. Use the guides on the following pages to identify and correct system faults. Contact Technical Support before replacing the unit or any components and for additional troubleshooting.

DIAGNOSTIC CODES

When an error occurs, the Diagnostic Code along with SERVICE REQUIRED will be displayed on the control screen. If a 5818 Alert Light is used, the light will turn on when an error occurs.

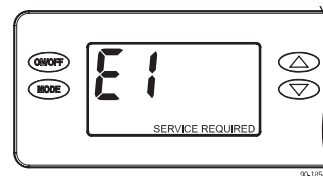


TABLE 1 – DIAGNOSTIC CODES

Diagnostic Code	Failure Mode	Action	Reset
E1	Internal Humidity or Temperature Sensor Open or Shorted	<ol style="list-style-type: none"> 1. If connection okay, replace User Interface, Part No. 5738. 	Cycle Power
E3	Model A77 Remote Control Communication Loss	<ol style="list-style-type: none"> 1. Check connections between Model A77 and dehumidifier control board. Terminals should be fully inserted and secured in the control board and Model A77 control terminals. 2. If connections are correct and secure, turn off the dehumidifier and remove the Model A77. Use a short section of 4-wire cable to reconnect the Model A77 to the control board. Turn the dehumidifier back on and increase the dryness level setting on the Model A77. If the dehumidifier turns on, the problem is with the wiring between the dehumidifier and control. 3. If the dehumidifier does not turn on, call Technical Support. 	Self-Correcting
E4	Insufficient Capacity	<ol style="list-style-type: none"> 1. Check the frost sensor connection at the power board. Terminal should be fully seated on the power board pins. 2. Remove the side access panel and verify that the sensor is secured to the suction line. 3. If the sensor is connected and secured to the refrigeration line proceed to the next step. 4. Reset the fault by cycling power to the dehumidifier. 5. Turn the humidity setting down (below room/home humidity level) to make a dehumidification call. 6. Allow the fan and compressor to run for approximately 10-15 minutes and then enter diagnostic test mode by simultaneously pressing the UP ARROW and MODE buttons for 3 seconds. The LCD will display the temperature measured by the internal sensor while also displaying AIR SAMPLING and ON, the humidity measured by the internal sensor while also displaying %RH and ON, and the frost sensor temperature while also displaying ON. Scroll through these values and by using the UP/DOWN arrow buttons. 7. Record values and call Technical Support. 	Cycle Power
E5	High Temperature Thermistor Failure	<ol style="list-style-type: none"> 1. Check the high temperature sensor connection at the power board. Terminal should be fully seated on the power board pins. 2. Remove the side access panel and verify the sensor is not damaged and connected to the refrigeration line coming from the compressor. 3. If the sensor is connected and secured to the refrigeration line, it may need to be replaced with Part No. 5815 – contact Technical Support to confirm. 	Cycle Power
E6	Low Temperature Thermistor Failure	<ol style="list-style-type: none"> 1. Check the low temperature sensor connection at the power board. 2. Remove the side access panel and verify the sensor is not damaged and connected to the suction line. 3. If the sensor is connected and secured to the refrigeration line, it may need to be replaced with Part No. 5814 – contact Technical Support to confirm. 	Self-Correcting
E7	Float Switch Open	<ol style="list-style-type: none"> 1. Empty the condensate pan. 2. Check the float switch connection at the control board. 3. If not using a float switch, verify jumper is between float switch terminals on dehumidifier control board. 4. If the problem persists, replace the float switch. 	Self-Correcting
E8	Inlet Air Temperature Out of 50°F – 104°F Range or Dew Point Below 36°F	<ol style="list-style-type: none"> 1. Verify all ductwork is properly sealed. 2. If no signs of leak points, contact Technical Support. 	Self-Correcting
E9	Fan or Compressor Fault	<ol style="list-style-type: none"> 1. Cycle power. If problem persists, contact Technical Support. 	Cycle Power

TABLE 2 – TROUBLESHOOTING GUIDE

Symptom	Possible Reason	Troubleshooting Procedure
Dehumidifier does not turn on/run.	No power to unit.	<ul style="list-style-type: none"> • Check that the dehumidifier is plugged in. • Check that the power switch is turned ON. • Check that the control is turned ON. • Check that the circuit breaker has not tripped.
Dehumidifier blower is running but with little or no airflow.	Pressure drop across dehumidifier is too high.	<ul style="list-style-type: none"> • Check dehumidifier air filter and replace if necessary. • Check for blocked duct work and clear.
Dehumidifier blower is running but compressor is not.	Float switch open.	<ul style="list-style-type: none"> • If float switch installed, check connections at control board and empty condensate pan. • If no float switch installed check that the jumper is installed at the float switch terminals on the control board.
	Coil frosting – defrost.	<ul style="list-style-type: none"> • Lack of or reduced airflow. Check dehumidifier air filter and replace if necessary. • Check for blocked duct work. • Inlet air conditions below 60°F. Increase the humidity setting.
	Inlet air temperature is outside of the 50°F – 104°F range or the dew point is below 36°F and there is a demand for dehumidification.	<ul style="list-style-type: none"> • Verify all ductwork is properly sealed.
Dehumidifier is not draining properly.	Drain line blocked or unit not level.	<ul style="list-style-type: none"> • Verify that the unit is level. • Check the drain line blockages and for a continuous downward slope.
Dehumidifier is producing hot air.	Normal function.	<ul style="list-style-type: none"> • Air is reheated across the condenser coil, resulting in a temperature rise between inlet and outlet, this is normal.

LIMITED WARRANTY

Your Research Products Corporation Anden™ Dehumidifier is expressly warranted for five (5) years from date of installation to be free from defects in materials or workmanship.

Research Products Corporation's exclusive obligation under this warranty shall be to supply, without charge, a replacement for any component which is found to be defective within such five (5) year period and which is returned not later than thirty (30) days after said five (5) year period by you to either your original supplier or to Research Products Corporation, Madison, Wisconsin 53701, together with the model number and installation date of the dehumidifier.

THIS WARRANTY SHALL NOT OBLIGATE RESEARCH PRODUCTS CORPORATION FOR ANY LABOR COSTS AND SHALL NOT APPLY TO DEFECTS IN WORKMANSHIP OR MATERIALS FURNISHED BY YOUR INSTALLER AS CONTRASTED TO DEFECTS IN THE DEHUMIDIFIER ITSELF.

IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED IN DURATION TO THE AFORESAID FIVE YEAR PERIOD. RESEARCH PRODUCTS CORPORATION'S LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, OTHER THAN DAMAGES FOR PERSONAL INJURIES, RESULTING FROM ANY BREACH OF THE AFORESAID IMPLIED WARRANTIES OR THE ABOVE LIMITED WARRANTY IS EXPRESSLY EXCLUDED. THIS LIMITED WARRANTY IS VOID IF DEFECT(S) RESULT FROM FAILURE TO HAVE THIS UNIT INSTALLED BY A QUALIFIED HEATING AND AIR CONDITIONING CONTRACTOR. IF THE LIMITED WARRANTY IS VOID DUE TO FAILURE TO USE A QUALIFIED CONTRACTOR, ALL DISCLAIMERS OF IMPLIED WARRANTIES SHALL BE EFFECTIVE UPON INSTALLATION.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages so the above exclusion or limitations may not apply to you.


This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

WARRANTY REGISTRATION

Visit us online at anden.com to register your Anden product. If you do not have online access, please mail a postcard with your name, address, phone number, email address, product purchased, model number, date of purchase, and dealer name and address to: Research Products Corporation, P.O. Box 1467, Madison, WI 53701.

Your warranty registration information will not be sold or shared outside of this company.

SERVICE PARTS

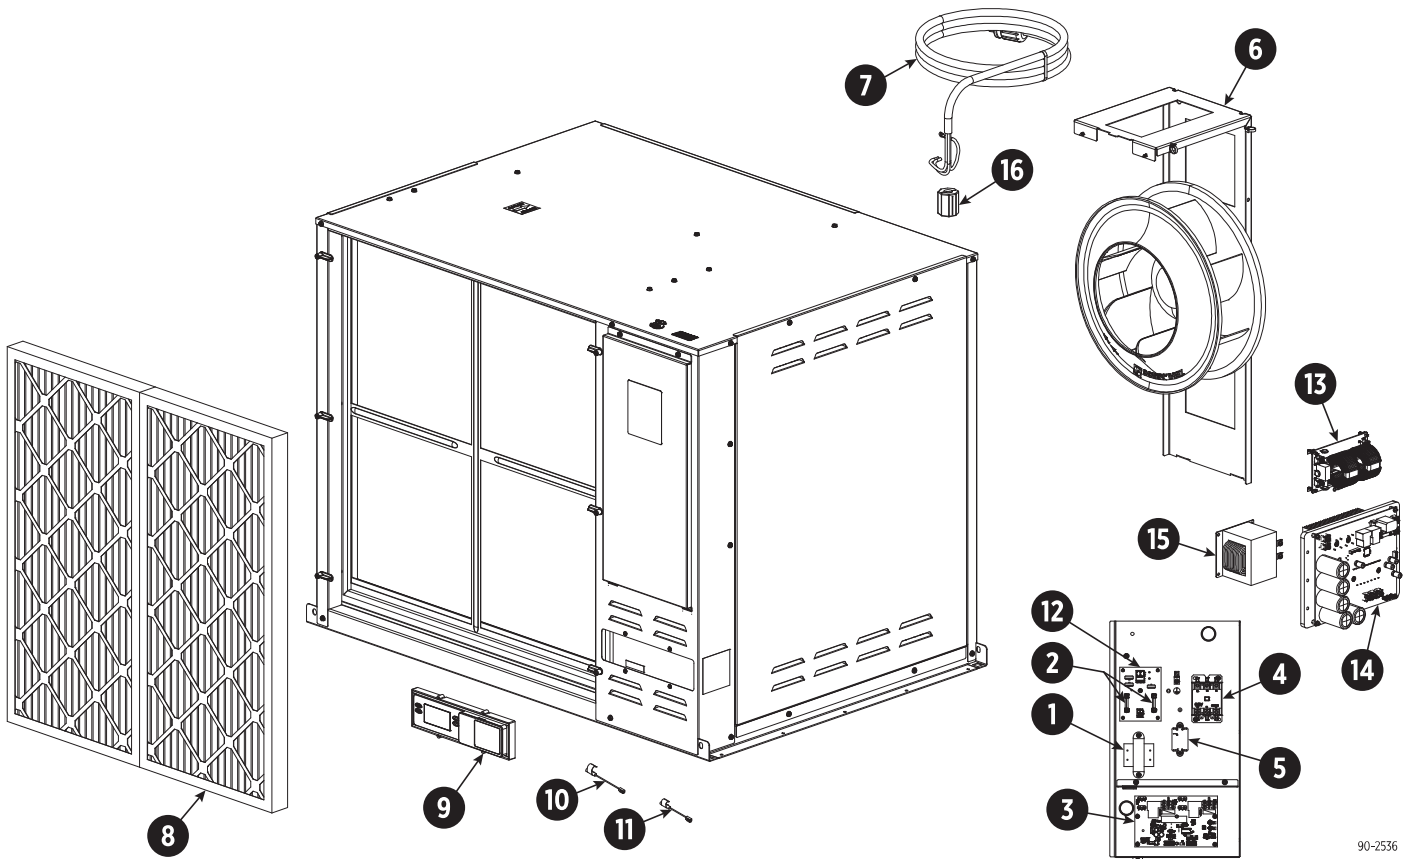

90-2536

No.	Part Description	Part No.
1	Transformer, 40VA, 240V (V1)	5784
	Transformer, 40VA, 277V (V3)	5808
2	Fuse, Class 3AB, 0.4A, 70C, 440V, Slow-Blow	5785
3	Internal Power PCB	5847
4	Compressor Contactor	5714
5	Fan Relay	5787
6	Fan Assembly	5810
7	Cord, SJT 10/3, L6-30P (V1)	5849
	Cord, SJT 10/3, L7-30P (V3)	5851
8	Filter, MERV 11	5852
9	User Interface	5853
10	Low Temperature Sensor	5814
11	High Temperature Sensor	5815

No.	Part Description	Part No.
12	MOV Board 240V	5854
	MOV Board 277V	5855
13	EMI Filter Board	5856
14	Compressor Drive Board	5857
15	Choke-Compressor Drive	5858
16	Ferrite-Power Cord	5860
Not Shown		
	Digital Dehumidifier Control	A77
	P-Trap Kit	5816
	Fitting, 3/4" MNPT x 3/4" BARB, PVC	5693
	Drain Tubing, 3/4" ID x 10' L	5740
	Leveling Feet	5789
	Alert Light	5818
	Duct Kit	5859

anden.com
P.O. Box 1467
Madison, WI 53701-1467
800.972.3710 F: 608.257.4357
Printed in USA
©2020 Anden – A Quality brand from Research Products Corporation

