




ASSEMBLY STEPS

1. Assemble bottom 4 corners and tubes.
2. Slide in 4 upright tubes.
3. Place frame into fabric.
4. Slide top 4 poles into fabric sleeves.
5. Add 4 top corner pieces.

* All corner pieces come with 4 pilot holes (2 top/2 bottom) so that you may use self-drilling screws (not included) to reduce risk of separation of poles and corner pieces. This step is optional.

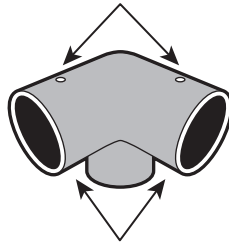

HGDPB2X4

PARTS LIST

	4 foot	4x	
	1 foot	4x	
	2 foot	4x	
			8x

